




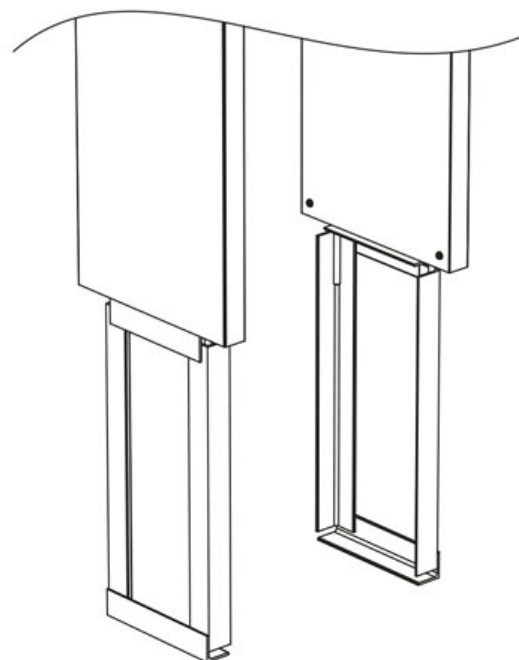

01

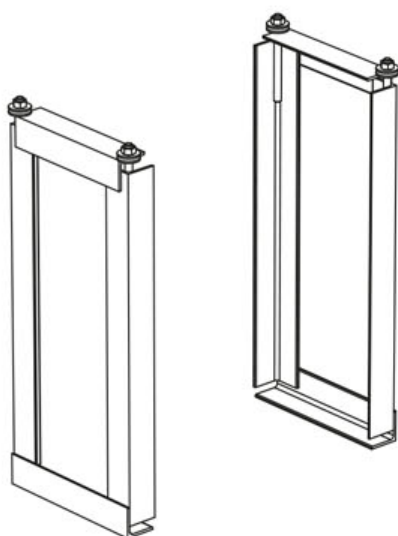

02

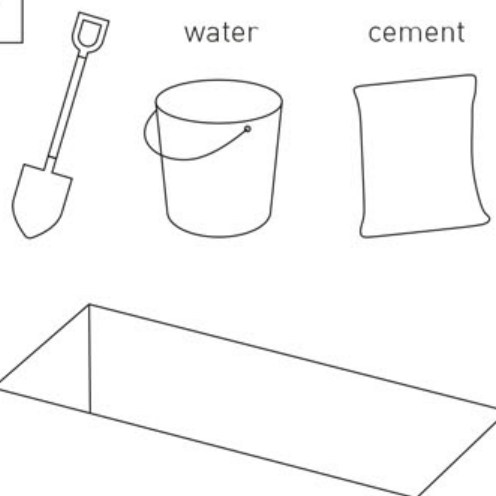


water

cement

Hole in the ground

03

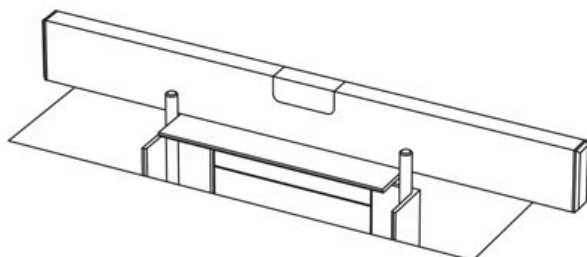

Wait 24 hours.

04

