


Parcel Box Assembly Instructions


Please read carefully and it WILL save you time.

1

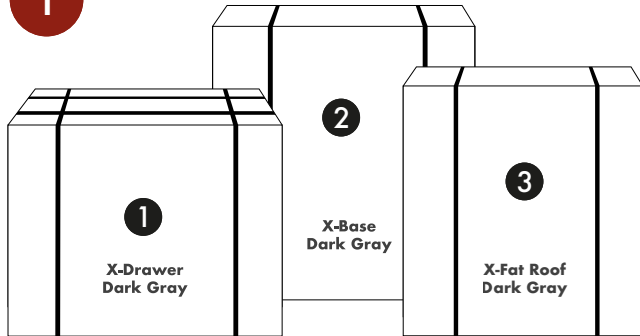


1. Drawer
2. Base (requires assembly)
3. Roof (Flat or Pitched)

2

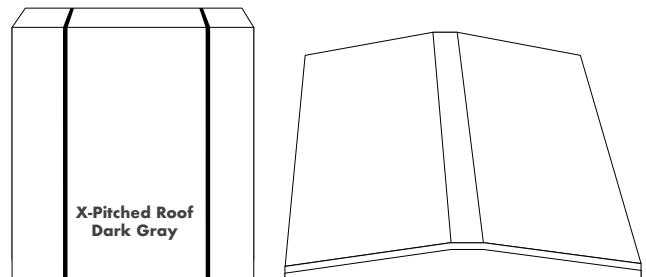


Pitched roof

3

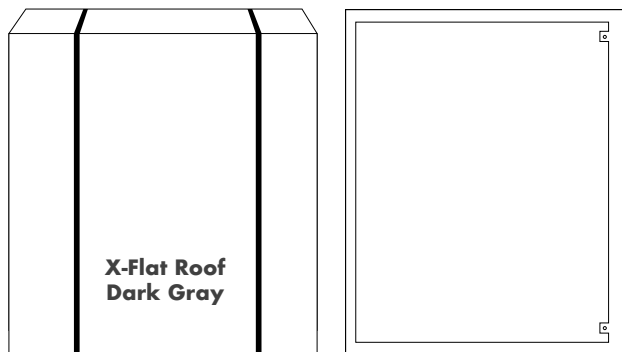



Flat roof

4

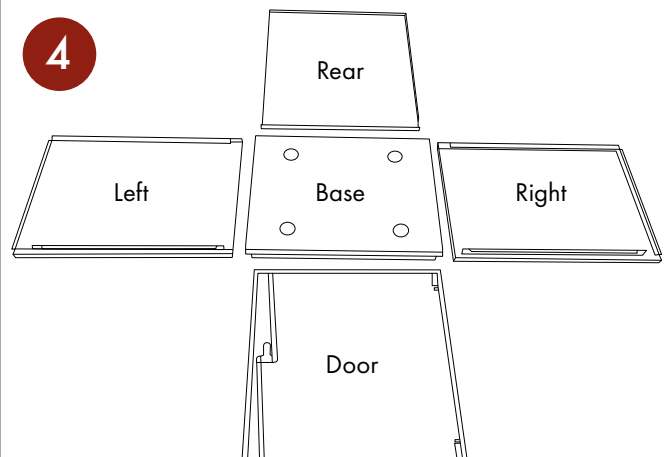







Base Assembly
Layout the 5 main parts as in picture

5

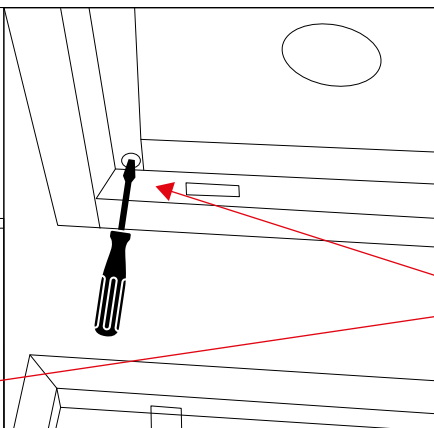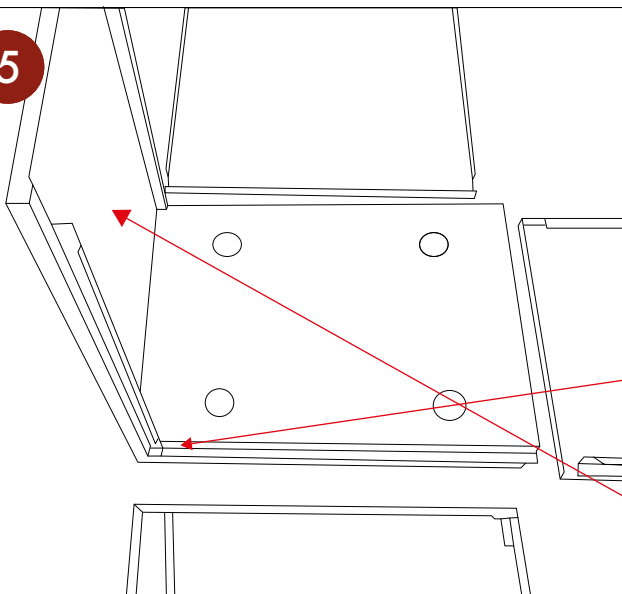


Fit support
screw to hold
left side to base

Fit left side into base

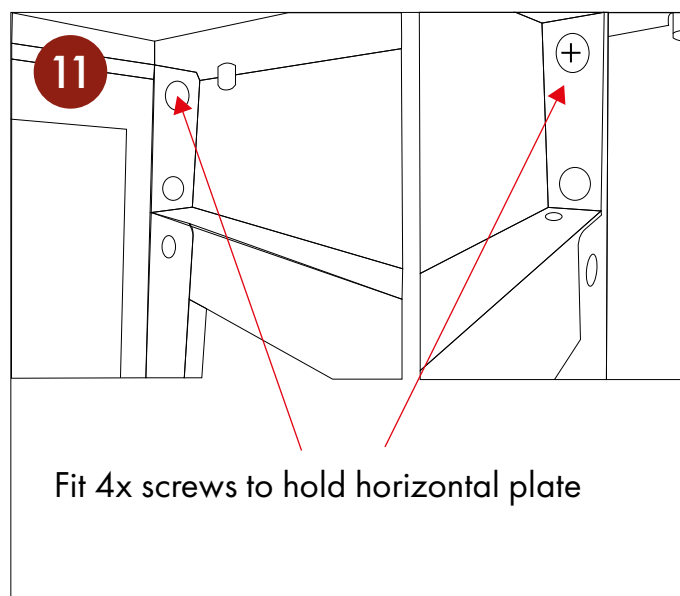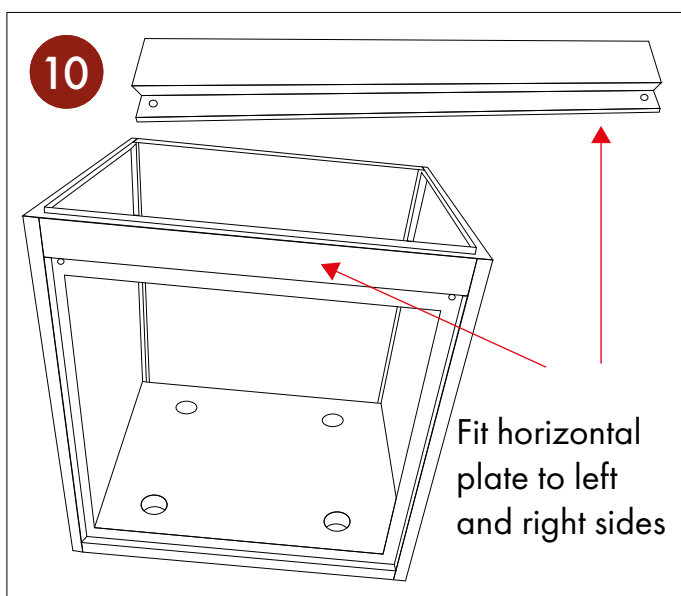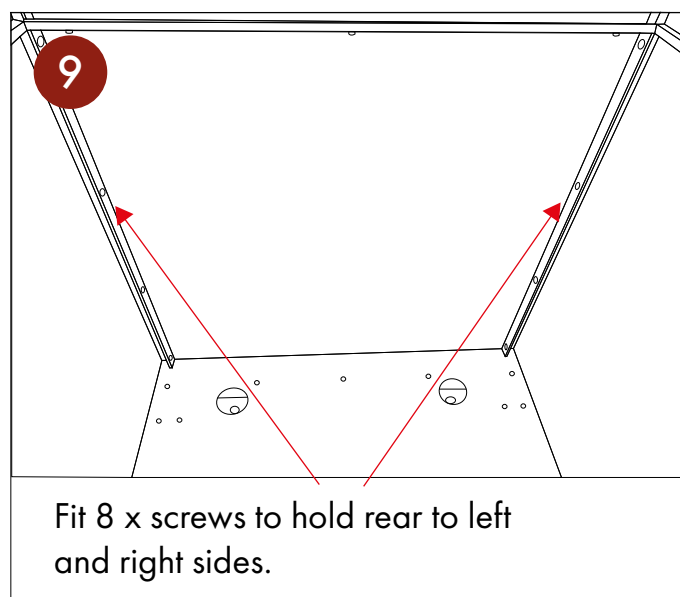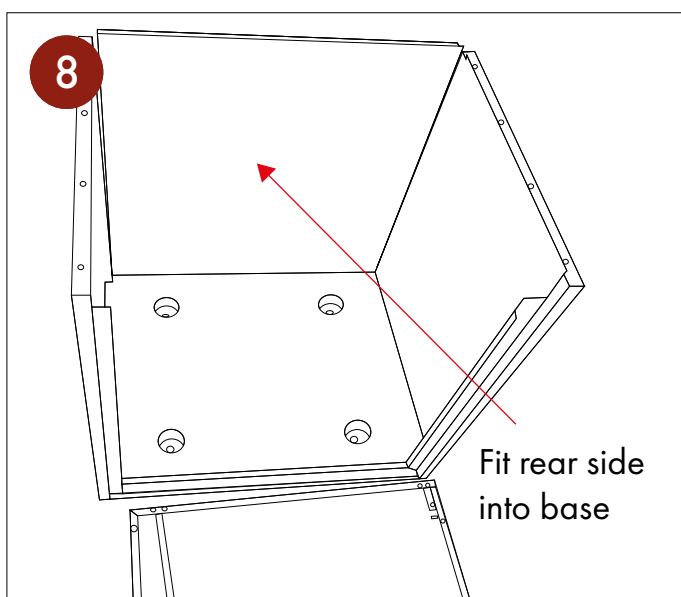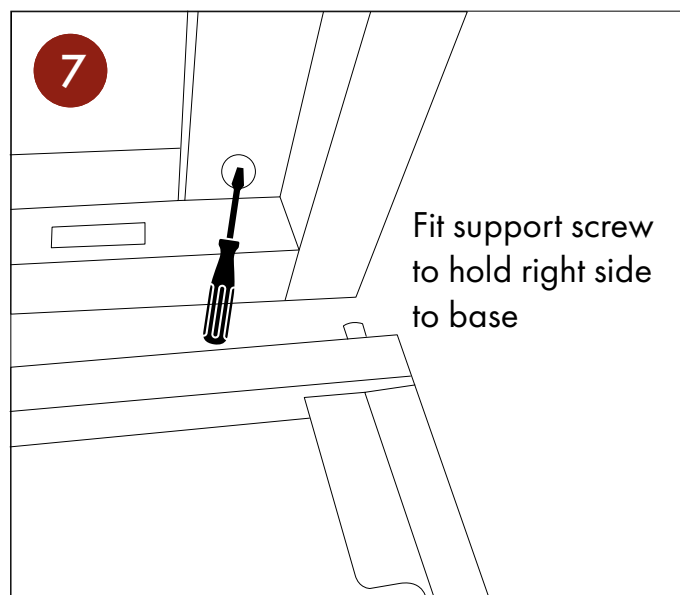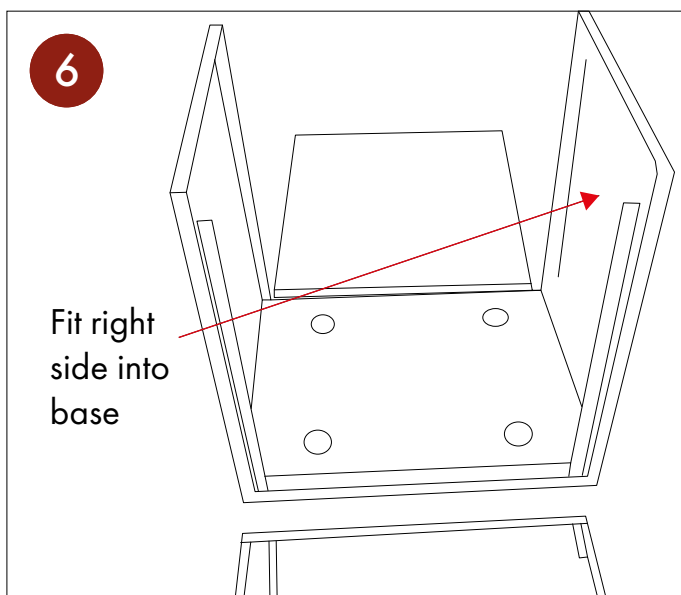


12

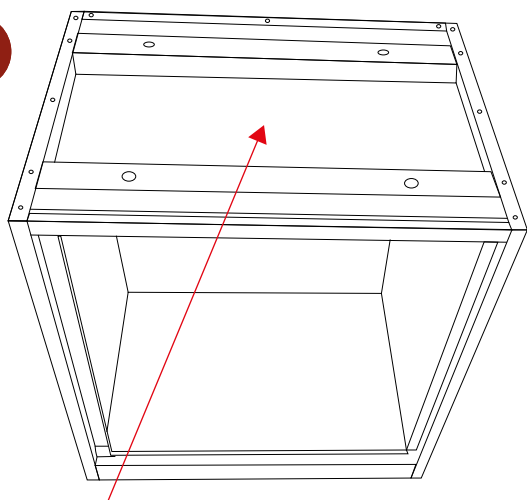

Flip base upside


13

Fit 14 x screws to base

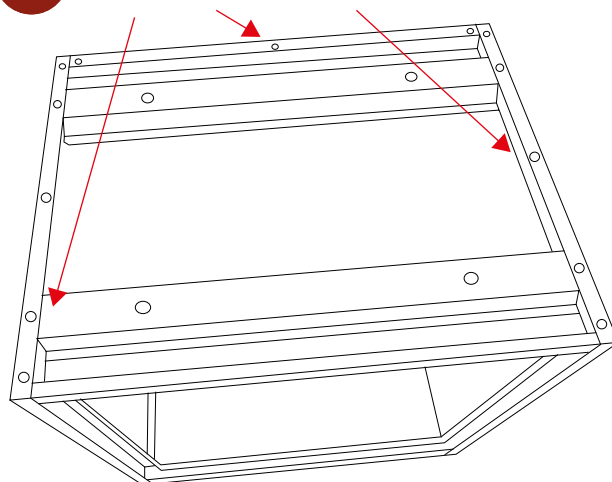


14

Unpack draw unit

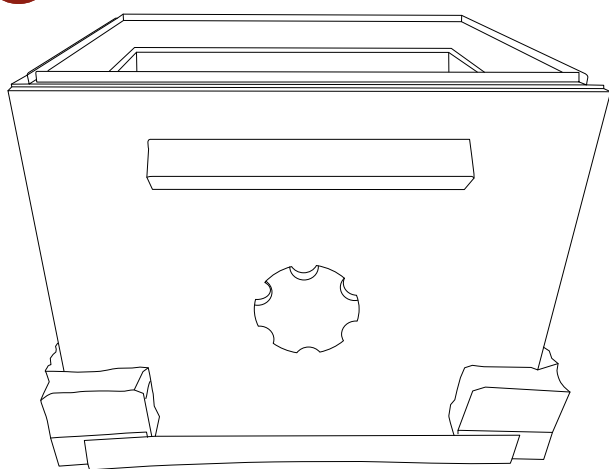


15

Remove draw

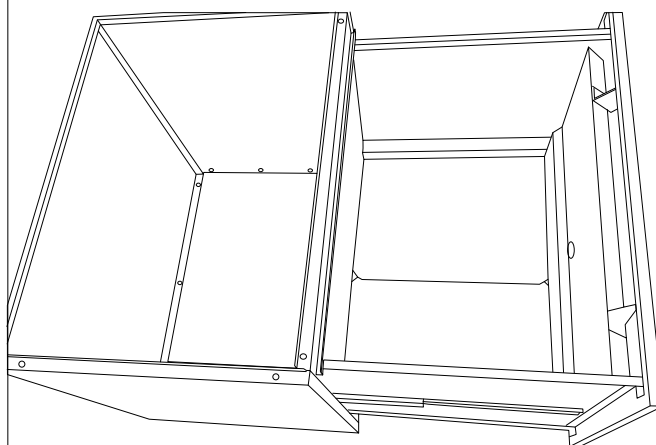


16

Draw removed from top assemble

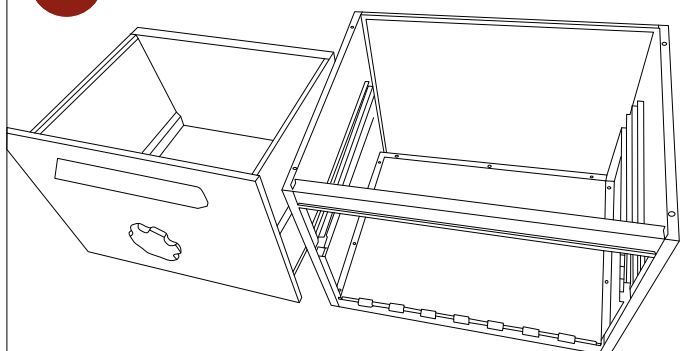


17


Flat or pitched roof

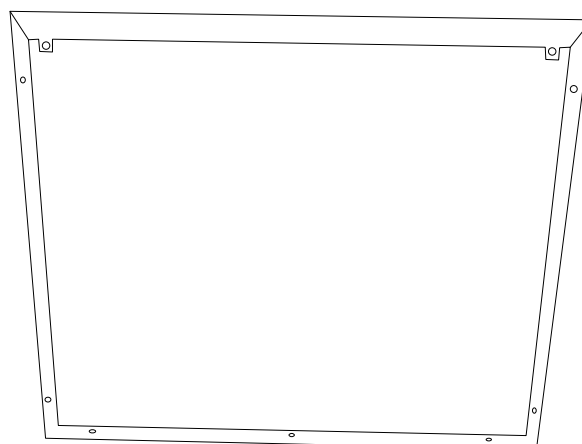


- 18** Fit roof to top assembly. Fit several screws to hold roof in place

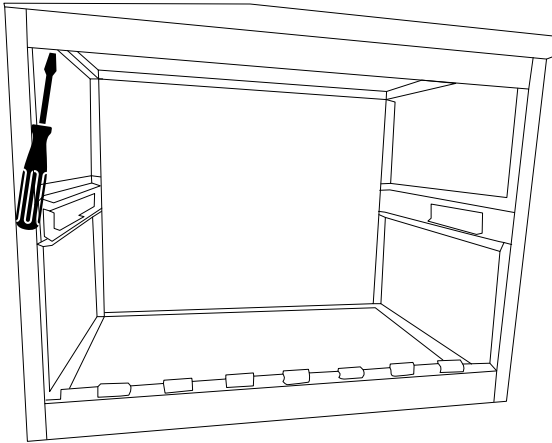


- 19**
Turn top assembly and roof on side and fit 9x screws to roof

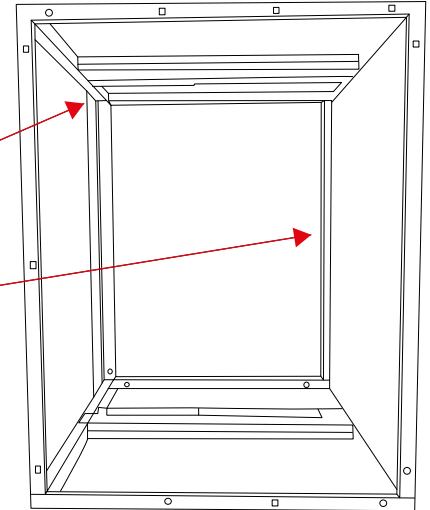


20

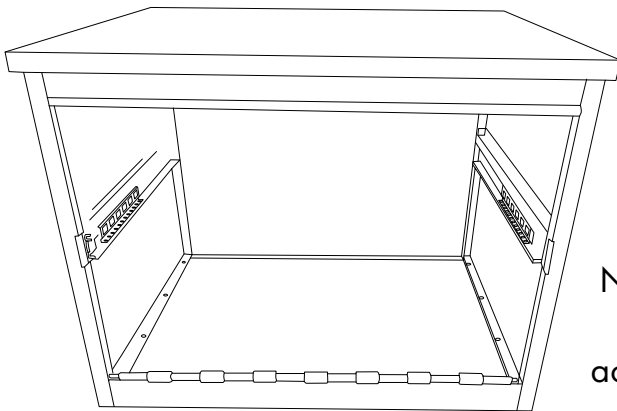

Place top assembly onto base.
Note- Fit for front or rear door access as required

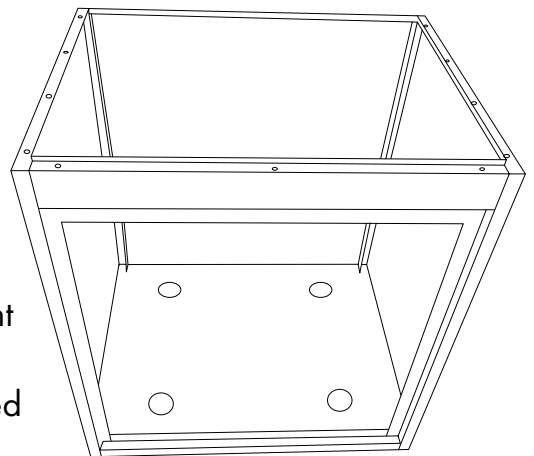


- 21** Fit 14 x screws to secure Top Assembly to Base

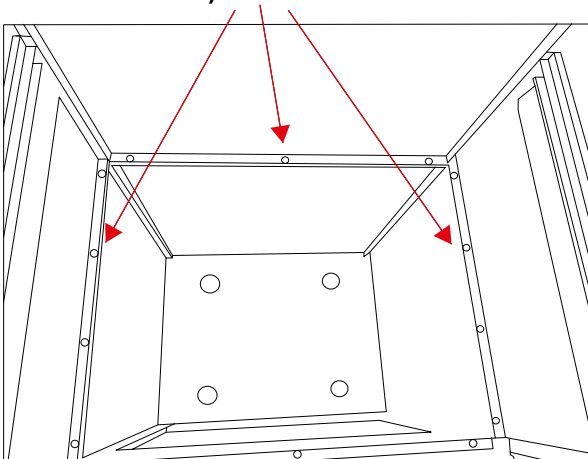


22


If fixing hard up against wall.
Markup 4x holes to wall, drill, fit wall plugs and fixings.

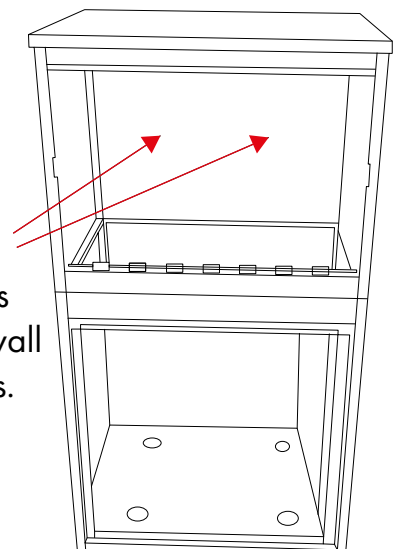


23

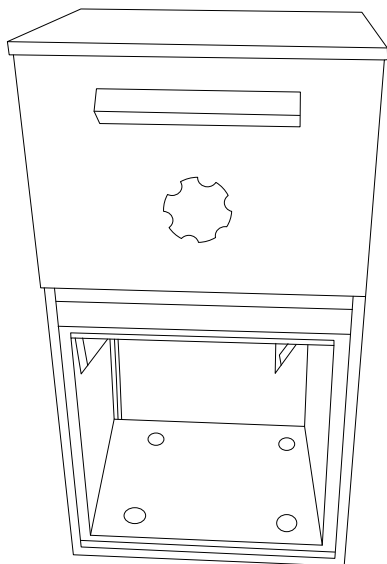

Carefully refit
drawer to Top
Assembly.

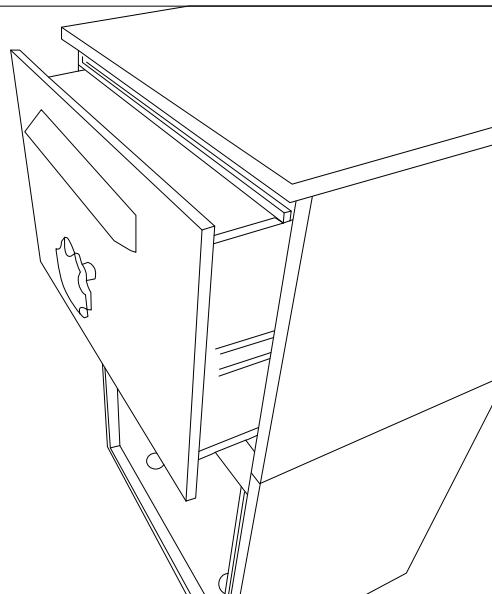


25

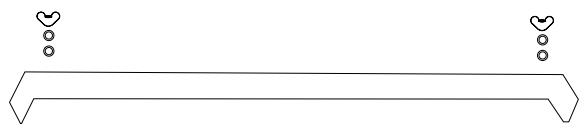


Draw locking bracket

Fit draw locking bracket to back
of drawer using supplied wingnuts
and washers.

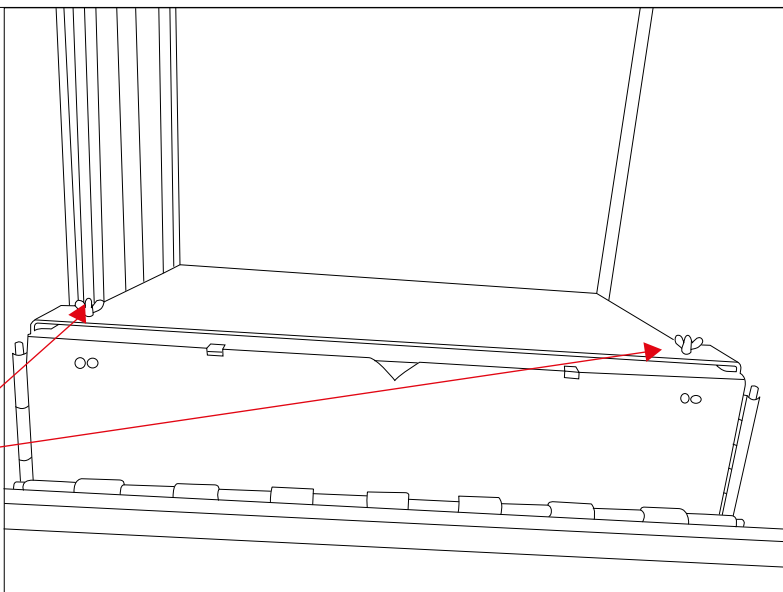

27

Place 2 x nylon washers on door
frame and fit door hinge

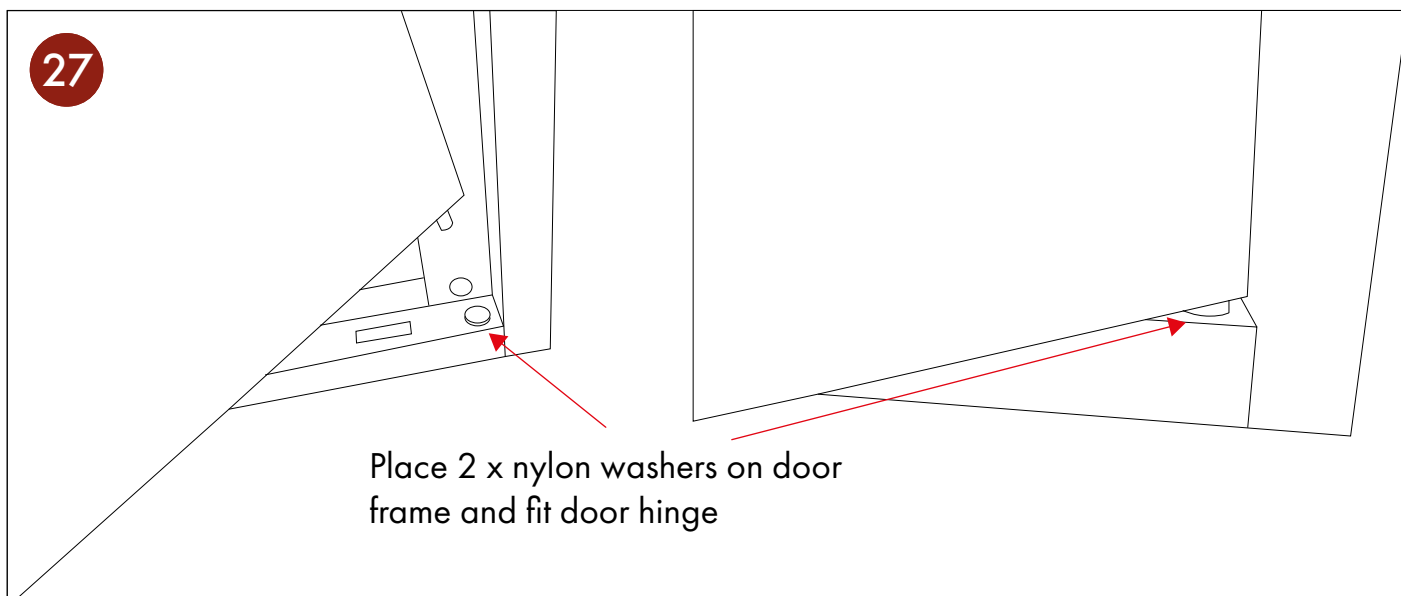

23

Fit door hinge to
top of door frame

