


Castino

Sanello

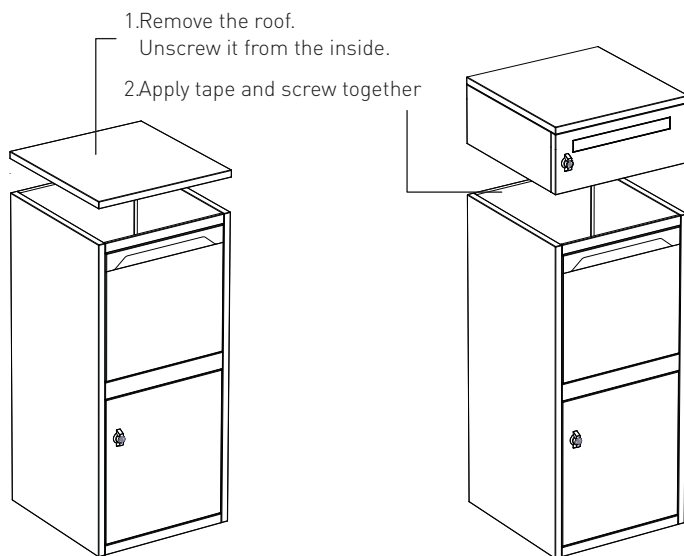

1.Remove the roof.

Unscrew it from the inside.

2.Apply tape and screw together

